


Face-Off 3000 & GSS-3000

System Configuration Instructions

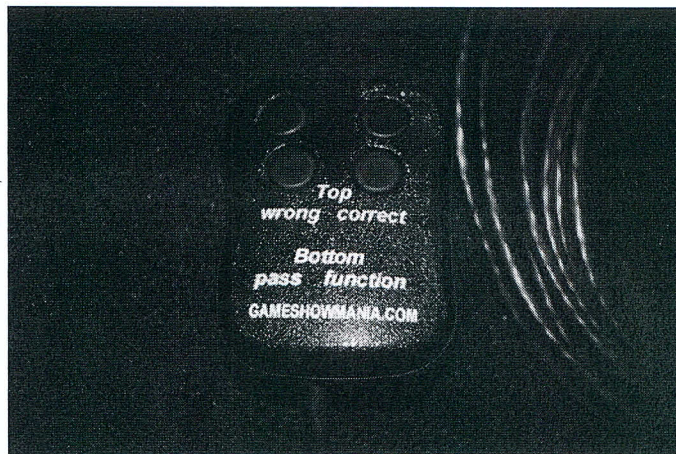

This instruction manual will help you configure the scoring on your Face-Off 3000 or GSS-3000 game show system. A hard-wired 4 button remote will be necessary for the configuration.

Note: These instructions cannot be used with a wireless remote.

Step 1: Understanding the System Functions

Each system contains six **Functions** and are visible on the left digit. These digits are located on the **Red** or **Green** side of your podium.

Function #1: System Selection (Values = 0, 1, 2)

0 = Face-Off (Single Digit System)

1 = (Double Digit Red/Blue) Master Podium

2 = (Double Digit Green/Yellow) Slave Podium

Function #2: Increment Counter "When Scoring Correct" (Value = 1 - 99)

1 = 1, 2, 3, 4, 5, 6, 7, etc.

2 = 2, 4, 6, 8, 10, 12, etc.

5 = 5, 10, 15, 20, 25, etc.

Function #3: Decrement Counter "When Scoring Wrong" (Value = 1 - 99)

1 = 9, 8, 7, 6, 5, 4, 3, 2, 1, 0, etc.

2 = 14, 12, 10, 8, 6, 4, 2, 0, etc.

5 = 30, 25, 20, 15, 10, 5, 0, etc.

Function #4: Maximum Counting Option (Value = 1 - 99)

50 = Score will only count to 50

95 = Score will only count to 95

99 = Score will only count to 99

Function #5: Not Used

Function #6: System Firmware Revision (Read-Only)

Step 2: Accessing the System Menu

By pushing a button sequence on the hard-wired remote you can access the system menu.

System Sequence	Push in sequence: function, pass, wrong, correct
------------------------	---

If done correctly, the left digit will be blinking the number one (1). This is the **Function** digit. You can change **Functions** only when this set of digits is blinking. The set of digits located on the **Blue** or **Yellow** side of the podium are the **Value** digits and can also be changed only when they are blinking.

You may toggle back and forth between the **Functions** and the **Values** by using the **function button**.

To change the value of a **Function** press the function button and when the **Value** digit starts to blink press the **wrong or correct buttons** (the two top buttons) to change the value.

Switching between **Functions** is as easy as changing their values. Press the **function button** to return to the left blinking digit (**Function** digit) and use the **wrong or correct buttons** on the remote to change the **Function**.

Once all of your **Function** values are correct press the **pass button** on the lower left to confirm and save changes to your system.

These options will be stored in your system until they are changed. You may configure your system to count by 1s, 2s, 5s, etc and count up to a maximum 30, 50 or even 99. Technical assistance is always available.



Tech Support: 570-676-9400