



A-I AMUSEMENT & PARTY RENTAL

17 SUNNYBROOK DR. CINCINNATI, OHIO 45237

PHONE: (513) 761-4386 FAX: (513) 761-8555

WWW.AMUSEMENTRENTAL.COM

GAME SHOW MANIA

Game Show Mania requires a sound system (not included) for the microphones and sound effects.

One Unit Play

1. Unlock the fasteners on the sides of the carry case and remove the Game Show Mania unit from the case.
2. The carry case can be used as a table for the unit. Put the carry case back together and lock the fasteners. Place the unit on top of the carry case, with the front display facing the audience.
3. Remove the back panel (easily pulls off) to access the inside of the unit for set up. Inside the unit you will find the accessories. Remove from the unit.
4. Insert the microphones into the 3-pin jacks on the top of the unit, located between the buzzer buttons.
5. Inside the back wall of the unit there are a series of jacks for the wired accessories to plug into. Locate the jack for the wired remote controller, marked "controller" and plug the controller in.
6. Plug the 3-pin wire into the 3-pin jack located in the large box mounted inside the unit. This wire will run to the sound system.
7. Plug in the power cord to the small box mounted inside the unit next to the left wall. Plug the power cord into your electronic source. The buzzer buttons should now be flashing. The numeral display should be at "0" for each player. If your sound system is turned on and hooked up to Game Show Mania correctly, you are ready to begin play. You can replace the back panel and feed the wires through the open corners.

Two Unit Play

When linking two units together, follow above directions for each unit with the following exception

1. You will only rub one unit to the sound system. It does not matter which one.
2. You will only need to plug in the wired remote to one of the units. It does not matter which one.
3. Use the link wire to connect the two units together. Inside the units next to the controller jack is another jack marked "link". Plug in one link wire, it does not matter which on, to the link jack and plug the other end of the same wire into the link jack on the other unit.

ACCESSORIES PER UNIT

	(1) Power Cord
	(2) Microphones (no cables)
	(1) 3-pin Wire
	(1) Wired Remote Controller
	(1) Link Wire (Ethernet cable)

****Customer is responsible for any damaged or missing parts!****

OPERATION CHECK:

√ = "OK"

X = "SEE NOTES"

N/A = "NOT APPLICABLE"

INSPECT POWER CORDS FOR WEAR

INSPECT 3-PIN WIRE/ LINK WIRE FOR WEAR

INSPECT WIRED REMOTE CONBTROLLER FOR WEAR

ACCESSORIES:

POWER CORD

2 MICROPHONES

3-PIN WIRE

LINK WIRE

WIRED REMOVE CONTROLLER

NOTES/ACTION TAKEN:

TIME: ____ : ____ **A.M. / P.M**
(circle one)

NAME: _____ **DATE:** ____ / ____ / ____