



A-1 AMUSEMENT & PARTY RENTAL

17 SUNNYBROOK DR. CINCINNATI, OHIO 45237

PHONE: (513) 761-4386 FAX: (513) 761-8555

WWW.AMUSEMENTRENTAL.COM

HOT DOG ROTISSERIE GRILL

Note: All concession equipment should be operated on it's own 20 amp/110v circuit!

1. If using the bun warmer cabinet, lift cabinet off the unit and set aside.
2. Remove the flat cooking sheet to reveal a shallow pan. Fill this pan with water. This will create the steam needed to keep the buns moist. Check water occasionally and add water as needed.
3. Replace the cooking sheet and cabinet.
4. Add hot dogs to the rotisserie. DO NOT try to force the rotisserie to turn. To turn the rotisserie, turn the power switch "On". This will activate the rotisserie and light. When the rotisserie turns to the needed position, turn the unit off and add more hot dogs. Place hot dog buns in top cabinet on cooking sheet.
5. After adding hot dogs, turn power on and set temperature to desired cooking temperature.
6. When finished, remove any left-over hot dogs and buns.
7. Remove any water left in bun warmer pan.
8. Make sure unit is turned off/unplugged.

Holds approximately 30 regular sized hot dogs and approximately 20 buns.

******RENTER IS RESPONSIBLE FOR ALL DAMAGES******

HOT DOG ROTISSERIE CHECKLIST

Unit Number: _____

OPERATION CHECK:
APPLICABLE

√ = "OK"

X = "SEE NOTES"

N/A = "NOT"

☐ INSPECT POWER CORDS FOR WEAR/MISSING PINS

☐ HEATING ELEMENT WORKS

☐ ROTISSERIE ROTATES

☐ LIGHT WORKS

BEFORE PUTTING ON SHELF:

☐ BUN WARMING PAN

☐ INSTRUCTIONS

NOTES/ACTION TAKEN:

TIME: ____ : ____ **A.M. / P.M**
(circle one)

NAME: _____ **DATE:** ____ / ____ / ____