



A-1 AMUSEMENT & PARTY RENTAL

17 SUNNYBROOK DR. CINCINNATI, OHIO 45237

PHONE: (513) 761-4386 FAX: (513) 761-8555

WWW.AMUSEMENTRENTAL.COM

HOVERBALL RACE RULES

THE OBJECT OF THE GAME IS FOR TWO COMPETITORS OR TEAMS TO MOVE THE BALL FROM ONE END OF THE INFLATABLE TABLE TO THE OTHER END AND THEN INTO THE BASKET USING THE CONES OF AIR. IT'S MUCH EASIER SAID THAN DONE! IF THE BALL FALLS FROM THE JETS OF AIR YOU MUST START ALL OVER AGAIN. GAME CAN BE PLAYED BY 2-14 PLAYERS AT A TIME.

KIDS AND ADULTS CAN PLAY. COMES WITH (14) HOVERBALLS.

SET UP

1. REMOVE UNIT FROM BAG AND UNROLL ONTO A SMOOTH, LEVEL SURFACE.
2. TIGHTLY STRAP THE UNIT'S BLOWER TUBE ONTO THE INFLATABLE. PLUG THE BLOWER INTO A 110V 20 AMP ELECTRIC OUTLET. THERE IS A TOGGLE SWITCH LOCATED ON THE FRONT OF THE BLOWER. TURN IT ON AND THE UNIT WILL BEGIN INFLATING.
 - NOTE: THE BLOWER SITS AT THE END OF INFLATABLE (OPPOSITE END OF WHERE BASKETS ARE LOCATED). MAKE SURE THE BLOWER TUBE IS NOT TWISTED OR PINCHED.
3. AFTER THE UNIT IS INFLATED, USE THE TIE-DOWN STRAPS TO SECURE IT IN PLACE. (STAKES OR SANDBAGS DEPENDING ON WHERE THE UNIT IS SET UP).
4. IF USING OUTSIDE, DO NOT OPERATE IN RAIN, DARKNESS, LIGHTENING, OR IN WINDS EXCEEDING 20 MPH.

RULES

- TO BEGIN, PARTICIPANTS NEED TO BE ON EACH SIDE OF THE GAME BEHIND EACH COLORED CONE. A BALL SHOULD BE PLACED ABOVE EACH CONE AND "FLOATING" ON AIR COMING OUT. THE BALL MUST BE CAREFULLY MANEUVERED FROM ONE CONE TO THE NEXT WITHOUT FALLING OFF AND GET TO BASKET AT THE END OF THE GAME. IF BALL FALLS OFF AT ANY POINT, THAT PARTICIPANT NEEDS TO START AT THE BEGINNING AGAIN.
- GAME CAN BE PLAYED INDIVIDUALLY OR AS A TEAM.
- NO ROUGH PLAY, JUMPING OR CLIMBING ON THE INFLATABLE

I HAVE READ AND UNDERSTAND THESE RULES. I WILL SEE THAT THEY ARE ENFORCED.

NAME X _____

(PLEASE PRINT AND SIGN)

DATE _____

COMPANY REP X _____

DATE _____

*******RENTER IS RESPONSIBLE FOR ALL DAMAGES*******