



A-1 AMUSEMENT & PARTY RENTAL

17 SUNNYBROOK DR. CINCINNATI, OHIO 45237

PHONE: (513) 761-4386 FAX: (513) 761-8555

www.AmusementRental.com

MONEY MACHINE - BOOTH

ACCESSORIES

- SAFETY GOGGLES
- STOCK-IT POCKET

OPERATING INSTRUCTIONS

1. HANG THE "STOCK-IT POCKET" ON THE FRONT WALL.
2. UNLOCK BLOWER LATCH AND SLIDE BLOWER BACK TO STOP AND LOCK LATCH.
3. PLUG UNIT IN. TURN POWER SWITCH ON (TOGGLE SWITCH BELOW YELLOW BUTTON)
4. WHEN THE CONTESTANT IS READY (AND WEARING SAFETY GOGGLES), PRESS THE "START" BUTTON.
5. THE MAXIMUM IS 150 PIECES TO BE USED IN MACHINE AT ONCE.
6. REAL MONEY, PLAY MONEY, OR COUPONS SHOULD ONLY BE USED IN MACHINE.

RULES

1. PLAYERS MUST WEAR EYE PROTECTION WHEN INSIDE THE MONEY MACHINE.
2. THE AVERAGE PERSON USUALLY CATCHES 8 TO 12 PIECES.
3. PAPER SHOULD BE CRINKLED SO IT MOVES FREELY WITHIN MACHINE AND SO IT DOESN'T GET STUCK TO THE SIDES.
4. THE TIMER IS PRE-SET FOR 30 SECONDS.
5. PLAYER SHOULD CATCH THE PIECES IN MID-AIR, NOT AGAINST THE SIDES OR THEIR BODY. DO NOT PICK UP PIECES OFF THE FLOOR, WALLS OR CEILING.
6. PLAYER SHOULD PUT PIECES IN "STOCK-IT POCKET" AFTER CATCHING.
7. WHATEVER IS IN THE 'STOCK-IT POCKET' IS THEIR WINNINGS WHEN TIME EXPIRES.

*******RENTER IS RESPONSIBLE FOR ALL DAMAGES*******