



A-1 AMUSEMENT & PARTY RENTAL

17 SUNNYBROOK DR. CINCINNATI, OHIO 45237

PHONE: (513) 761-4386 FAX: (513) 761-8555

www.AmusementRental.com

NACHO CHEESE WARMER INSTRUCTIONS

1. REMOVE LID AND LADLE AND PLACE THE METAL RING IN THE BOTTOM OF THE UNIT (CENTERED).
2. ADD APPROXIMATELY THREE INCHES OF WATER DIRECTLY INTO THE UNIT.
3. PLACE OPEN CAN OF NACHO CHEESE SAUCE INTO THE UNIT ON TOP OF THE METAL RING.
4. REPLACE THE LID.
5. PLUG IN THE UNIT AND TURN THE POWER ON.
6. ADJUST THE TEMPERATURE DIAL TO DESIRED HEAT LEVEL.
7. STIR OCCASIONALLY. IT WILL TAKE APPROXIMATELY 60 TO 90 MINUTES TO HEAT THOROUGHLY.

NOTE: FOR BEST RESULTS MAINTAIN WATER LEVEL AT THREE INCHES WHILE USING.

*****RENTER IS RESPONSIBLE FOR ALL DAMAGES*****