



A-1 AMUSEMENT & PARTY RENTAL

17 SUNNYBROOK DR, CINCINNATI, OHIO 45237

PHONE: (513) 761-4386 FAX: (513) 761-8555

WWW.AMUSEMENTRENTAL.COM

POPCORN MACHINE

NOTE: ALL CONCESSION EQUIPMENT SHOULD BE OPERATED ON ITS OWN 20 AMP/110V CIRCUIT! IT'S RECOMMENDED THAT THE UNIT BE PLUGGED DIRECTLY INTO THE ELECTRIC OUTLET.

MACHINE SWITCHES

THERE ARE THREE SWITCHES ON THE POPPER.

1. LIGHT AND WARMER SWITCH – TURNS ON THE HEAT TO THE BOTTOM CORN PAN AND HEAT LIGHT.
2. KETTLE MOTOR SWITCH – TURNS ON THE MOTOR WHICH DRIVES KETTLE AGITATOR SHAFT.
3. KETTLE HEAT SWITCH – TURNS ON THE HEAT ELEMENT. NOTE: POWER OFF CONTROL – WHEN HEAT SWITCH LIGHT IS BLINKING, TURN SWITCH OFF/ON TO RESTART THE KETTLE HEAT.

OPERATING / POPPING INSTRUCTIONS

PACKET METHOD/PRE-MEASURED:

1. TURN ON LIGHT.
 2. TURN ON KETTLE HEAT.
 3. LET HEAT FOR 5 MINUTES.
 4. TURN ON KETTLE MOTOR.
 5. CUT CORNER OF OIL PACKET AND POUR OIL ONLY INTO KETTLE.
 6. LET MIX UNTIL COMPLETELY MELTED, APPROXIMATELY 30-60 SECONDS.
 7. NEXT, POUR IN CORN.
 8. CLOSE LIDS, LEAVE DOORS SLIGHTLY OPEN.
 9. WHEN RAPID POPPING STOPS, DUMP KETTLE TO PREVENT BURNING.
 10. REPEAT AS DESIRED. WHEN DONE, TURN OFF KETTLE HEAT AND TURN OFF MOTOR.
- ❖ WHEN MAKING CARMEL CORN: ADD THE CARMEL FLAVOR PACKET AT STEP 5 & CUT THE CORNER OF THE CORN PACKET TO REMOVE THE SALT BEFORE ADDING THE CORN IN STEP 7

IF USING YOUR OWN POPCORN AND OIL:

1. FOLLOW STEPS 1 – 4 FROM "PACKET METHOD."
2. WE RECOMMEND 1.6 TO 2 OZ. OF FLAVORED AND COLORED COCONUT OIL AND 1 TABLESPOON OF FLAVACOL.
3. POUR IN 6 OZ. OF CORN.
4. FOLLOW STEPS 8-10 FROM "PACKET METHOD."
5. REPEAT AS DESIRED.



WARNING

To avoid serious burns, do NOT touch the kettle while it is hot!



TROUBLESHOOTING

X _____

- IF THE KETTLE IS NOT TURNING ON:
 - ENSURE THAT THE KETTLE IS PROPERLY PLUGGED IN – THE PLUG SHOULD BE INSERTED INTO THE OUTLET IN THE CEILING OF THE MACHINE, ONCE INSERTED THE PLUG SHOULD BE TURNED TO THE RIGHT TO LOCK IT INTO PLACE
- IF THE KETTLE IS ON AND WARM, BUT NOT HOT:
 - PLUG THE POPCORN MACHINE DIRECTLY INTO A WALL OUTLET, ON ITS OWN CIRCUIT
 - IF USING AN EXTENSION CORD, THE CORD DIAMETER MUST BE THE SAME THICKNESS AS THE POPCORN MACHINE CORD, OR THICKER
 - IF KETTLE HAS STOPPED HEATING AND THE KETTLE HEAT SWITCH LIGHT IS BLINKING, TURN SWITCH OFF/ON TO RESTART KETTLE HEAT.
- IF THE ABOVE CRITERIA ARE MET AND YOU ARE STILL HAVING ISSUES WITH THE MACHINE, CALL THE EMERGENCY NUMBER IN THE TOP RIGHT CORNER OF THIS SHEET

CLEANUP: CLEANUP IS INCLUDED WITH YOUR RENTAL. WE JUST ASK YOU TO PLEASE EMPTY ANY PRODUCT BEFORE RETURNING.

*****RENTER IS RESPONSIBLE FOR ALL DAMAGES*****