



A-1 AMUSEMENT & PARTY RENTAL

17 SUNNYBROOK DR. CINCINNATI, OHIO 45237

PHONE: (513) 761-4386 FAX: (513) 761-8555

WWW.AMUSEMENTRENTAL.COM

SAFE ARCHERY

1. REMOVE UNIT FROM THE BAG AND UNROLL ONTO A SMOOTH SURFACE FREE FROM DEBRIS.
2. PLACE BLOWER NECK INTO THE UNIT'S BLOWER TUBE (LOCATED ON REAR SIDE OF UNIT) AND SECURE THE TUBE TO THE BLOWER'S NECK.
3. PLUG BLOWER POWER CORD INTO YOUR ELECTRICAL SOURCE. TURN ON BLOWER SWITCH. IN A FEW MOMENTS THE UNIT SHOULD BE FULLY INFLATED. IF UNIT IS NOT INFLATING, CHECK TO MAKE SURE THE BLOWER TUBE IS NOT KINKED.
4. TIE CORNER STRAPS OFF TO STAKES OR SANDBAGS AS APPROPRIATE.
5. REQUIRES (1) 110 VOLT 20 AMP CIRCUIT. DIMENSIONS ARE 5' X 10' X 8' 4"
7. S.A.F.E. ARCHERY IS DESIGNED FOR BOTH KIDS AND ADULTS TO SAFELY EXPERIENCE AND ENJOY ARCHERY. ADULT SUPERVISION SHOULD BE PRESENT AT ALL TIMES.

ACCESSORIES

	(1) INFLATABLE
	(1) BLOWER
	(1) GREY EQUIPMENT BOX
	(8) 50' EXTENSION CORD
	(8) TARGET BALLS
	(2) BOWS
	(8) FOAM TIPPED ARROWS
	(1) BLACK CARRY CASE

SAFETY GUIDELINES

1. BE SURE THAT THERE ARE NO CHILDREN OR ADULTS ON THE UNIT ITSELF. IF LEFT UNATTENDED, CHILDREN HAVE THE TENDENCY TO WANT TO PLAY ON TOP OF THE UNIT. WE ADVISE THAT THIS UNIT NOT BE LEFT UNATTENDED FOR SAFETY REASONS.
2. DO NOT OPERATE UNIT IN RAIN, LIGHTNING, DARKNESS, OR WINDS EXCEEDING 20 MPH.

I HAVE READ AND UNDERSTAND THESE RULES. I WILL SEE THAT THEY ARE ENFORCED.

NAME X _____

(PLEASE PRINT AND SIGN)

DATE _____

COMPANY REP X _____

DATE _____

*******RENTER IS RESPONSIBLE FOR ALL DAMAGES*******