



A-1 AMUSEMENT & PARTY RENTAL

17 SUNNYBROOK DR. CINCINNATI, OHIO 45237

PHONE: (513) 761-4386 FAX: (513) 761-8555

WWW.AMUSEMENTRENTAL.COM

STRIKE A LIGHT – PROGRAM SETTINGS

THE PROGRAM MODE WILL ALLOW FOR AN ADJUSTMENT OF CERTAIN PARAMETERS SUCH AS SOUND OPTIONS AND DISPLAY BRIGHTNESS. TO ENTER INTO THE PROGRAM MODE, USE THE SMALL PUSHBUTTON LOCATED ON THE UNDERSIDE OF THE GAME BY THE MASTER POWER SWITCH. THE GAME MUST BE ON AND NOT IN OPERATION TO ENTER THE PROGRAM MODE. THE ADJUSTMENT CONTROLS WILL BE COMPRISED OF BUTTONS 1-3 ON THE PLAYER 1 SIDE AS SHOWN IN THE DIAGRAM BELOW.



BUTTON 1 = +1

BUTTON 2 = -1

BUTTON 3 = ADVANCE

THE DISPLAY WILL FIRST READ THE CURRENT VERSION SOFTWARE AS PICTURED BELOW.



SOFTWARE VERSION 1.03

PUSH BUTTON 3 TWICE TO ADVANCE TO FUNCTION 1 IN THE TABLE BELOW. YOU CAN THEN USE BUTTONS 1 AND 2 TO MAKE ADJUSTMENTS AS NECESSARY, HITTING BUTTON 3 TO ADVANCE TO THE NEXT PROGRAM FUNCTION. **YOU MUST ADVANCE FROM FUNCTION 5 FOR SETTINGS TO BE SAVED.** THE PROGRAM LIGHTS WILL GO OUT ONCE YOU ADVANCE FROM FUNCTION 5.

#	FUNCTION	RANGE	DEFAULT
F1	GAME VOLUME	0 – 20	16
F2	ATTRACT MODE SOUND	0/ON – 1/OFF	0 (ON)
F3	LED DISPLAY BRIGHTNESS		45
F4	BASS SOUND ENHANCEMENT	0 – 15	0
F5	TREBLE SOUND ENHANCEMENT	0 - 15	0

DEFAULT VALUES HAVE BEEN USED FOR BEST PERFORMANCE, AND SHOULD ONLY BE CHANGED WHEN ABSOLUTELY NECESSARY.